

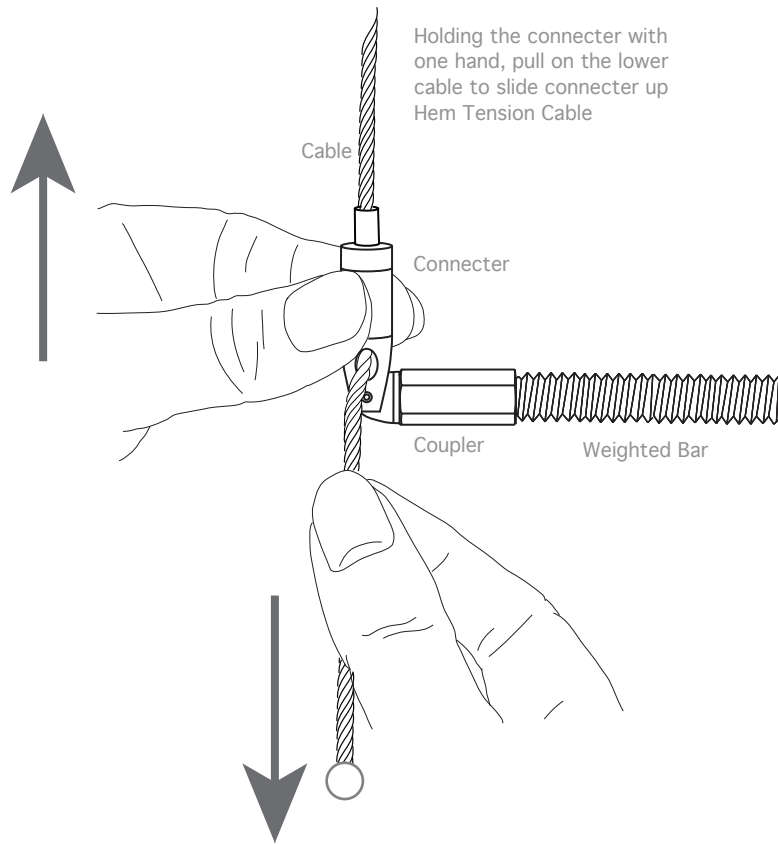


Raising the Bar

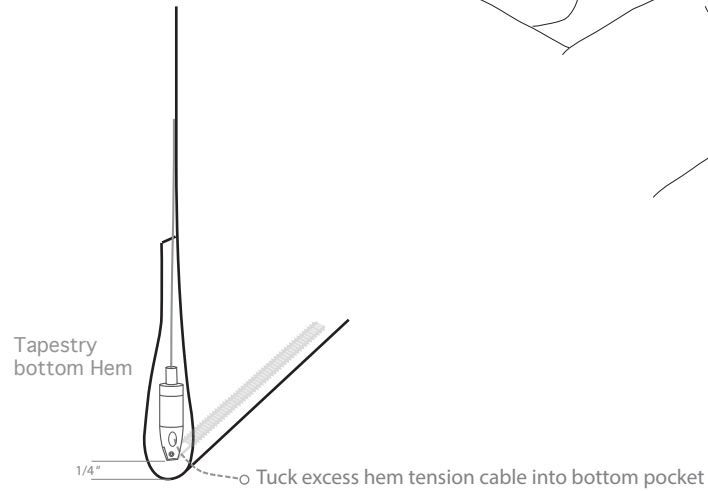

Lowering the Bar

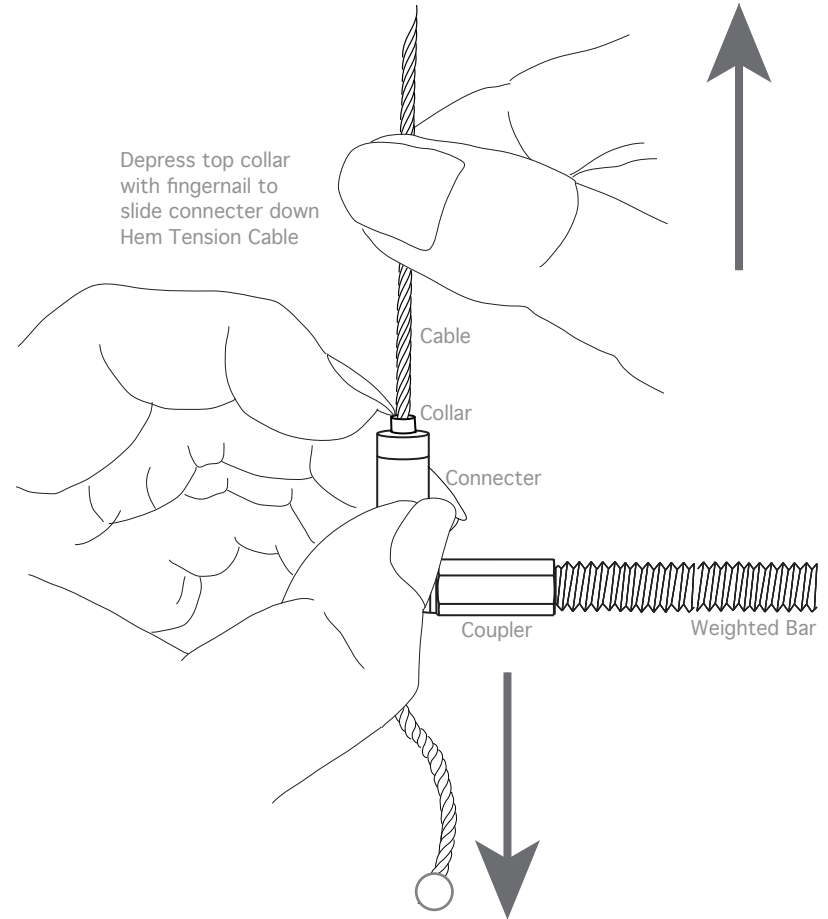

Ideal Weighted Bar Placement

The Weighted Bar should not be touching the bottom tapestry hem. It should hang approximately 1/4 inch above the bottom of tapestry. This allows for a slight tension on the Hem Cable, keeping the vertical edges of tapestry straight.